
martor

TECHNICAL DATA SHEET

SECUPRO MEGASAFE NO. 116006

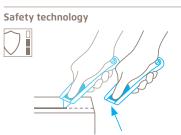

Fully automatic blade retraction – a very high degree of safety

The fully automatic blade retraction of the SECUPRO MEGASAFE guarantees a very high degree of safety from cut injuries. The blade withdraws into the handle immediately after leaving the material being cut. Even if the slider is still being activated.



SAFETY KNIFE MADE OF ALUMINIUM WITH FULLY AUTOMATIC BLADE RETRACTION.

Order No. 116006.02

Quality that's visible. With rounded-tip trapezoid blade.

You would like a safety knife with a large blade extension? Or are you looking for a worthy replacement for either OPTI-SAFE or MAXISAFE? In both cases, the SECUPRO MEGASAFE is your top choice. Thanks to a cutting depth of up to 17 mm, this cutter doesn't shy away from a challenge. And no matter your task, safety is always guaranteed; the fully automatic blade retraction functions even when you decide to not fully extend the blade.

Robust handle

The body of our top quality SECUPRO MEGASAFE is 100% aluminium. And ultimately, 100% robust. You can master all manner of standard cutting materials with this cutter. Even multi-layered ones.

Change without opening

Blade change is easy and safe. Simply push down on the back end of the rocker device located on the topside of the

cutter, and push the slider completely forward. The blade is ready for changing.

Perfect handling


The lightly rounded handle fits particularly well in your hand. Your thumb doesn't get a raw deal either: soft grip on the the slider makes for a pleasant, slip-resistant resting pad.

Double-sided slider


With the right hand? With the left hand? No need to ask this question! The SECUPRO MEGASAFE is fitted with a slider that's accessible from both sides. Choose for yourself!

Double-edged blade


Before you need to change the quality blade, you have the chance to turn it over once. Usage time of the blade is doubled and fatigue is held at bay: with a simple flip of the blade, your SECUPRO MEGASAFE will cut like new.

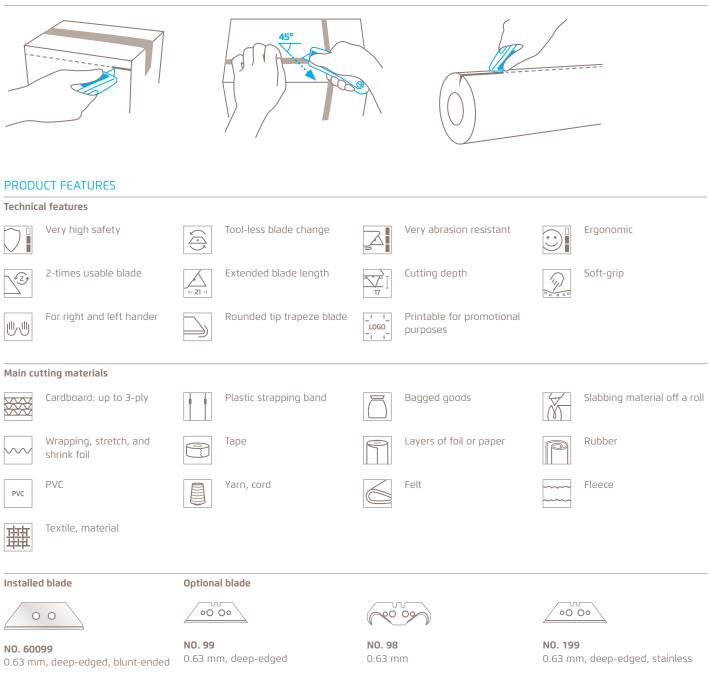


BLADE CHANGE




Do not unscrew the handle to change the blade!



Press the **rocking element down-wards**.



Move the slider fully forwards. Turn the handle so that the **transparent blade cover faces upwards**.



Now **rotate or change the blade** and carefully release hold of the slider. Close the rocking device.

SERVICES OFFERED

Safety poster



Training video

Technical data sheet



PRODUCT AND PACKAGING DETAILS

Order No.	NO. 116006.02	Packaging unit	1 in single unit box
Knife size (L x W x H)	153 x 26 x 38 mm	Size Single unit box	160 x 28 x 45 mm
Weight knife	142.0 g	Weight single unit box	160.0 g
Basic material	Aluminium	EAN Code single unit box	4002632919893
Extended blade length	21 mm	Quantity in outer pack	10 knives
Cutting depth	17 mm	Size outer pack	144 x 100 x 168 mm
		Weight outer pack	1660.0 g
		EAN Code outer pack	4002632971211

SAFETY CERTIFICATE

Date of issue	11.08.2011	Certificates and awards	
Certification	GS certificate NO. S 60112078		
		TÜVRheinland	

ZERTIFIZIERT

SECURITY ADVICE

To ensure that you use your new MARTOR knife safely and most eff ectively, please read and note the following userinstructions. Please keep the written guide in a safe place so that you can access it at any time.

1. General application instructions: Please use the product carefully for cutting work only and not for any purposes other than those that are intended. Please take the correct handling and the proper use of the knives into account in this regard.

2. Special application instructions to avoid the danger of injuries: Only use knives that are in perfect condition and have sharp, clean and undamaged blades. employ the utmost care when handling the knives.

CAUTION: The blade is sharp and can result in serious and deep cuts. Therefore, never reach into the blade! To reduce the danger of injuries, hold the hand that is being used to restrain and stabilise the cutting base in such a manner that the restraining hand or even other body parts are not endangered in the event that the knife slips.

3. Replacement of spare parts: Replace any blades that become dull at the right time! Use only the replacement blades

available at MARTOR for this purpose. Dispose of old blades in a proper fashion. They should not be placed in a waste paper bin, as this poses a considerable danger of injuries. Never perform any repairs yourself. If the knife displays signs of aging or other wear, e.g. function problems when changing the blade or in the handling of the blade pushers, then it must be rejected and replaced with a new one. Any modifications or manipulations to the product are prohibited, as they impair the product safety. CAUTION: There is an extremely high danger of injuries here!

4. Non-use of the knife: Always secure the blade in such a way that injuries due to cuts are excluded. Store the knife in a secure place.

5. Care instructions: Always keep the knife clean and do not expose it to unnecessary humidity to safeguard a long service life.

CAUTION: No liability will be assumed for consequential losses. Subject to technical changes and errors! This knife does not belong in the hands of children!

BELT HOLSTER M WITH CLIP NO. 9921	What do you do with your cutting tools when you are not ac- tually using them? The MARTOR BELT HOLSTER M is a robust holder that allows you to carry all midsize MARTOR cutters as well as our safety scissors at all times. In addition, the inte- rior and exterior pockets are designed to allow you to load different tools: for example you can carry an extra cutter, a pen and a pack of blades. The MARTOR BELT HOLSTER is the ideal place to stow your tools safely when moving from A to B - and have them at hand, as soon as they are required.
USED BLADE CONTAINER NO. 9810	You can fill the USED BLADE CONTAINER with the content of your SAFEBOX. Or directly with your used blades. When the box is full, turn the lid until it shuts. Now the box cannot be reopened. The next step is to safely and completely dispose of the filled USED BLADE CONTAINER.
WALL MOUNT BRACKET USED BLADE CONTAINER NO. 9845	Include it in your order now! With this mounting bracket you can fix your USED BLADE CONTAINER to a central location. Use the clamp and screws and nuts supplied with the pro- duct to attach it to either a pipe or a rod.
SAFEBOX NO. 108000	The SAFEBOX is large enough to store a large number of used blades safely. And at the same time, it is compact enough to carry with you. The two slits are not only used for filling, but also to "shorten" your snap-off blades. When your SAFEBOX is full, empty it into your USED BLADE CONTAINER.

MANUFACTURER